

SW17H90***Series

Vacuum Cleaner

user manual

- * Please read the User Manual thoroughly before operating the vacuum.
- * For indoor use only.

English

imagine the possibilities

Thank you for purchasing a Samsung product.



Contents

YOUR VACUUM CLEANER

07

BEFORE USING THE VACUUM CLEANER

08

- 08 Trio System
- 09 Assembly
- 10 Wet accessory (Option)
- 12 Accessory

OPERATING CLEANER

14

- 14 Power cord
- 14 On/Off
- 15 Power control
- 16 Spray extraction

MAINTENANCE

18

- 18 Cleaning the dust bin and grille
- 20 Cleaning the dust filter
- 22 Cleaning the outlet filter
- 23 Maintain floor tools

TROUBLESHOOTING

25

Safety information

SAFETY INFORMATION



- Before operating the appliance, please read this manual thoroughly and retain it for your reference.



- Because the following operating instructions cover various models, the characteristics of your vacuum cleaner may differ slightly from those described in this manual.

CAUTION/WARNING SYMBOLS USED

	Indicates that a risk of death or serious injury exists.
	Indicates that a risk of personal injury or material damage exists.

OTHER SYMBOLS USED

	Represents something you must NOT do.
	Represents something you must follow.
	Indicates that you must disconnect the power plug from the socket.



This vacuum cleaner is a vacuum cleaner with an installed Waterfilter system for extraction cleaning, wet vacuuming and dry vacuuming. It is intended only for use in private households. The vacuum cleaner is to be used exclusively according to the specifications of this user manual.

Failure to meet these requirements could cause injury, damage the vacuum cleaner and void your warranty.

IMPORTANT SAFEGUARDS

GENERAL

- Read all instructions carefully. Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate on the bottom of the cleaner.
- Close supervision is necessary when any appliance is used by or near children. Do not allow the vacuum cleaner to be used as a toy. Do not allow the vacuum cleaner to run unattended at any time. Use the vacuum cleaner only for its intended use as described in these instructions.
- Do not use the vacuum cleaner without a dust bin and dust filter. Empty the dust bin before it is full in order to maintain the best efficiency.
- Do not use the vacuum cleaner to pick up matches, live ashes or cigarette butts. Keep the vacuum cleaner away from stoves and other heat sources. Heat can deform and discolour the plastic parts of the unit. Also do not use your vacuum cleaner to pick up sugar, salt, washing powder, chemical, dust of building materials (e.g. cement, metal shavings and so on).
- Avoid picking up hard, sharp objects with the vacuum cleaner as they may damage the cleaner parts.
Do not stand on the hose assembly.
Do not put weight on the hose.
Do not block the suction or the exhaust port.
- Switch the vacuum cleaner off on the body of the machine before unplugging from the electrical outlet. Disconnect the plug from the electrical outlet before emptying the dust bin.
To avoid damage, please remove the plug by grasping the plug itself, not by pulling on the cord.
- This appliance can be used by children aged from 8 years and above and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.


Cleaning and user maintenance shall not be done by children without supervision.

- Children should be supervised to ensure that they do not play with the appliance.
- The plug must be removed from the socket outlet before cleaning or maintaining the appliance.
- The use of an extension cord is not recommended.
- If your vacuum cleaner is not operating correctly, switch off the power supply and consult an authorized service agent.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Don't carry the vacuum cleaner by holding the hose.
Use the handle on the vacuum cleaner set.
- Unplug the cleaner when not in use.
Turn off the power switch before unplugging.
- Never set the vacuum cleaner in an upright position during operation or storage, it may cause a back flow of water.
- Do not overly stretch or bend the hose and tube system.
- Nozzles and tubes should not be held near the head during operation – injuries could result.
- Before cleaning, servicing, filling, emptying or in the event of malfunction, turn off all switches and unplug the mains plug.




SAFETY INSTRUCTIONS SPECIFICALLY FOR SPRAY EXTRACTION AND WET VACUUMING:

- Never point the cleaning jet at other people or animals, nor at electrical sockets or appliances.
- Persons with sensitive skin should avoid direct contact with the cleaning solution.
- If the cleaning solution contacts any mucous membranes (eyes, mouth, etc.), flush immediately with plenty of water.
- Do not use extension cords in wet areas.
- Empty all containers after wet/damp operation. Chemical substances (cleaners for carpets or hard floors) should be kept out of reach of children.
- Do not spray water on wood furniture and floor.
- Do not use any chemical substances for wet cleaning except the assigned detergent.
Samsung carpet cleaner and floor cleaner are available at your local Samsung distributor.
- Store the vacuum cleaner at indoor temperature.

Your vacuum cleaner

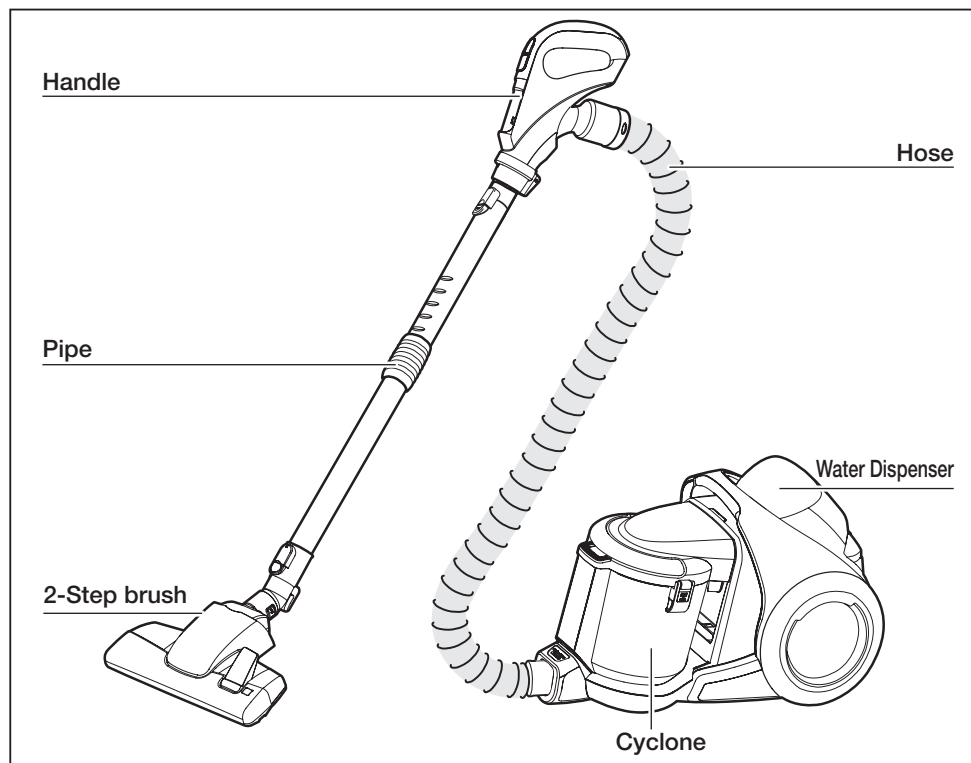


Accessory

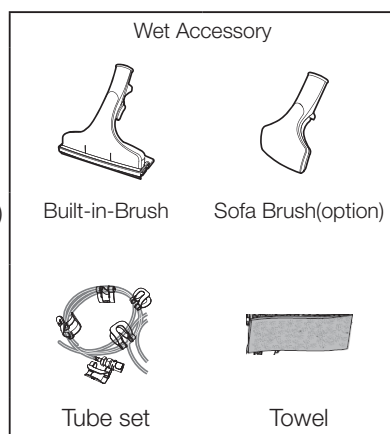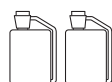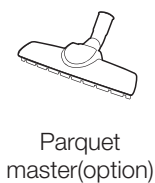

Before using the vacuum cleaner

TRIO SYSTEM


Dry cleaning

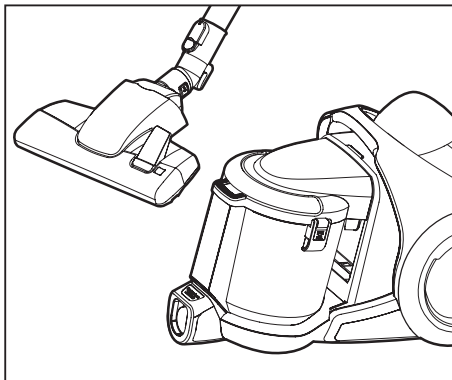


Water-filter cleaning



- Fill the dust bin with the fresh water to 'MAX' for water-filter cleaning.

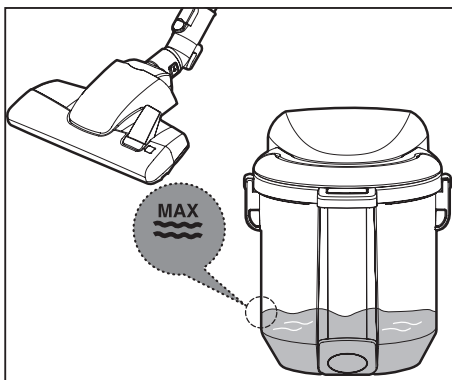


Wet cleaning

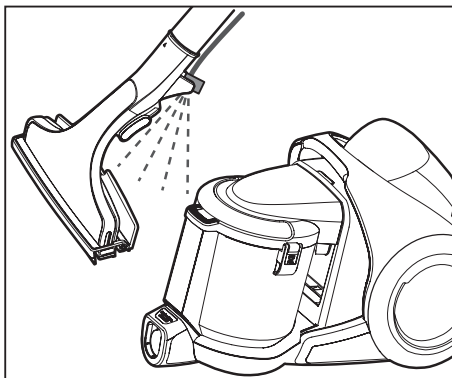


ASSEMBLY


Connecting the Hose

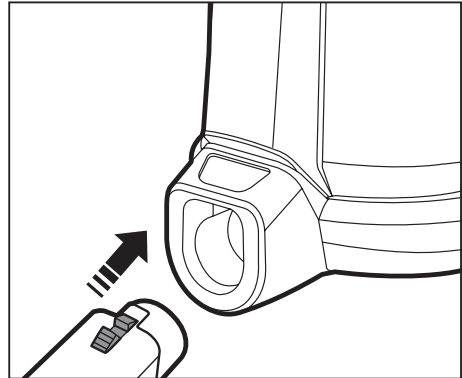

Connecting the handle and pipe

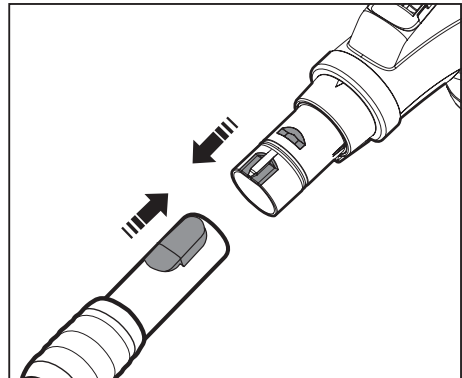


Connecting the brush


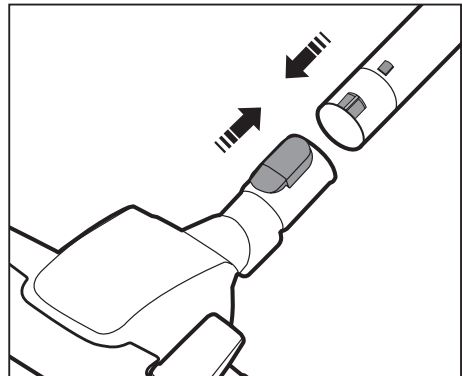


WET ACCESSORY (OPTION)


Connect the tube with the holder to the suction hose.

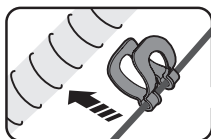


Assemble the connector with the handle.

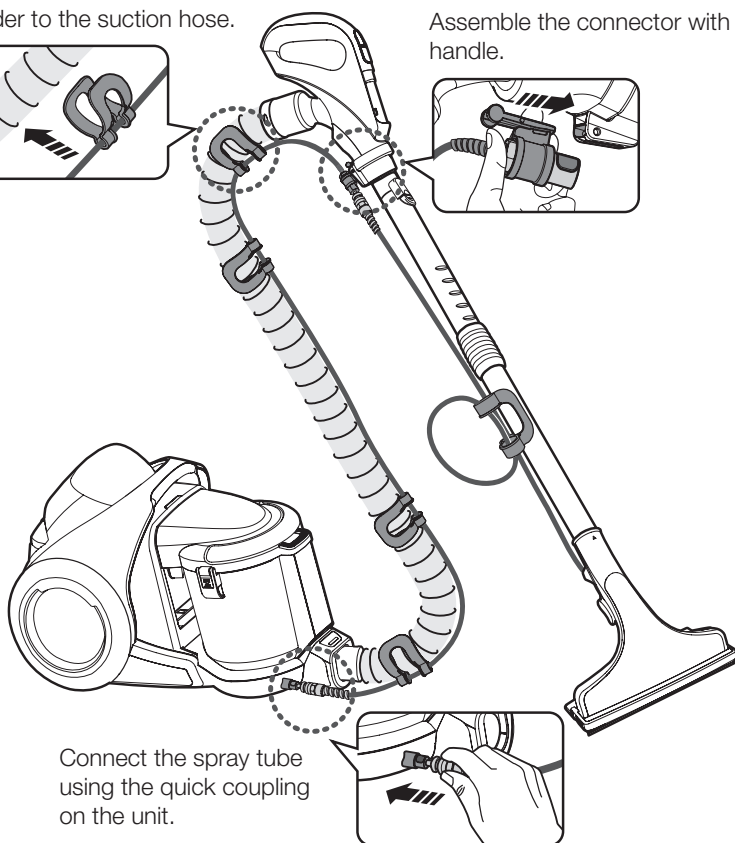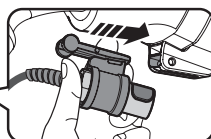

Connect the spray tube using the quick coupling on the unit.

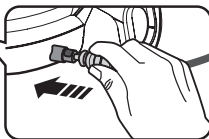

- To separate the quick coupling, press the yellow button .

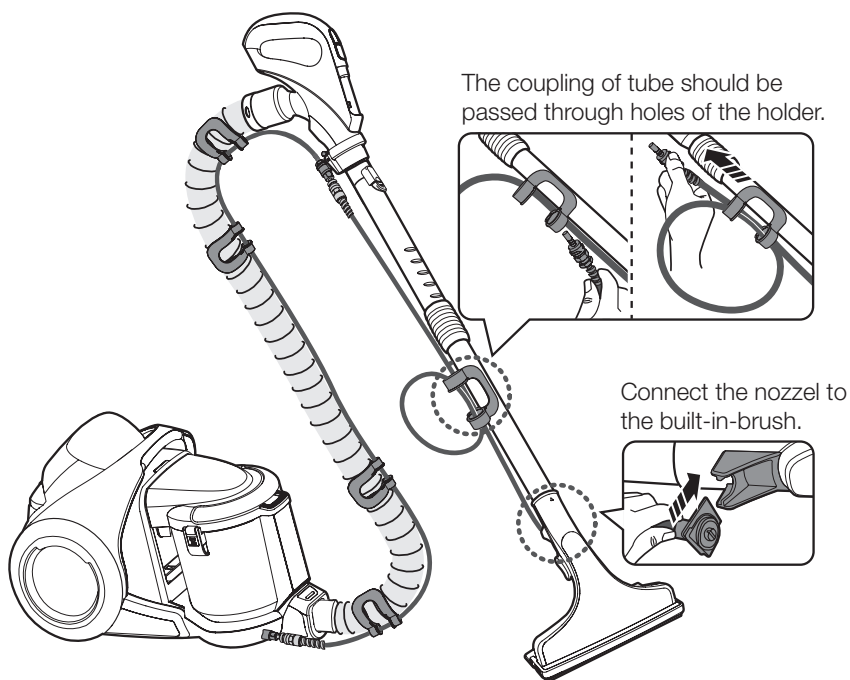

CAUTION


If the tube get twisted, reassemble the tube holder.
When water cleaning is not used, disconnect the spray tube from the suction hose or pipe.



- For spraying water smoothly, clean the nozzle hole with a slender tool.



To use the wet sofa brush, connect this directly to the handle of the suction hose.

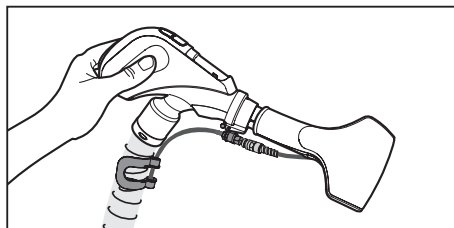


CAUTION


Never spray water to the wood or leather materials.

ACCESSORY


Use the crevice tool

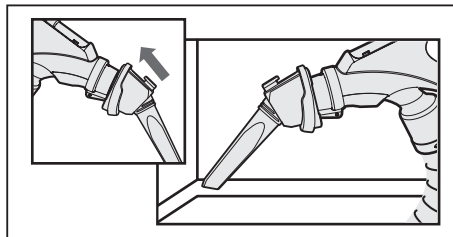

Use the dusting brush

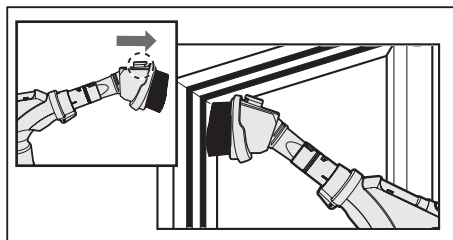


Use the upholstery tool

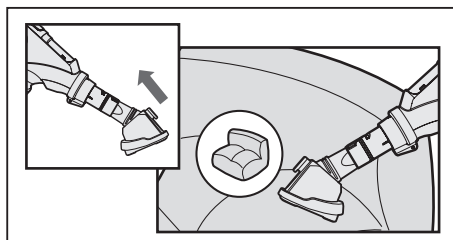


- To use 3-in-1 accessory , connect it directly to the handle of the suction hose.

Pipe


Adjust the length of the pipe by sliding the length control button located in the center of the telescopic pipe.

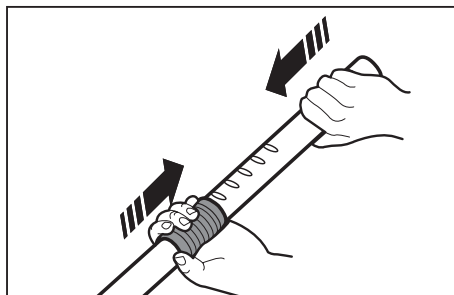


For storage, park the floor nozzle

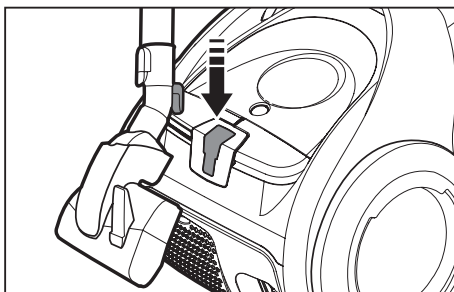

Do not pick up a machine while the floor nozzle parked.


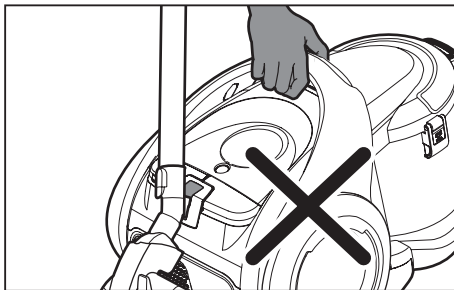


Never set the cleaner in an upright position during operation or storage.

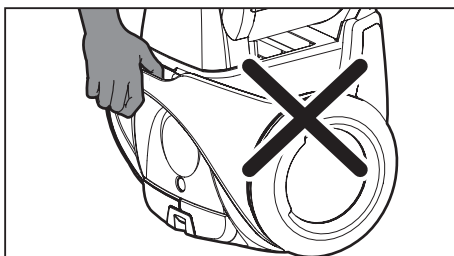


Operating cleaner

POWER CORD

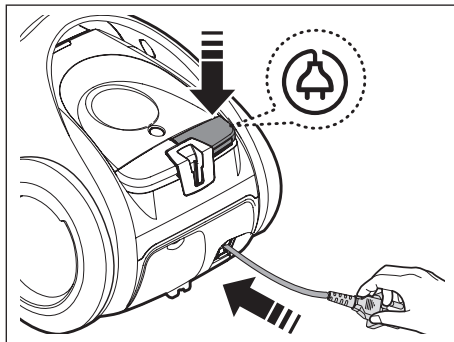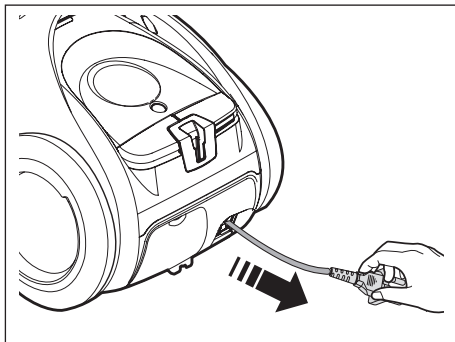


When removing the plug from the electrical outlet, grasp the plug, not the cord.

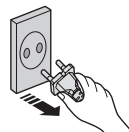

Never touch the electrical outlet or plug with wet hands.

ON/OFF

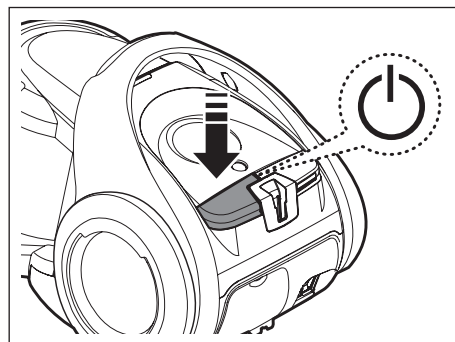

POWER CONTROL

Hose (controlled by radio frequency signals)




ON/OFF



Select a lower power / higher power



Pump ON/OFF

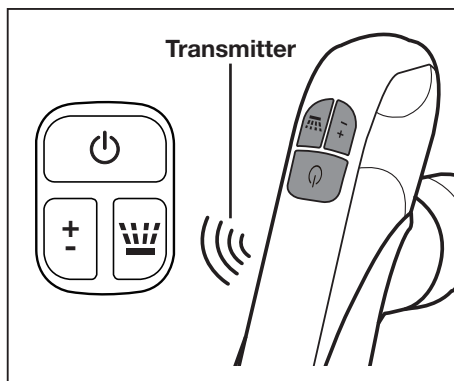


- Don't cover the handle transmitter when you use a handle control.
- If no button is pressed for 30 minutes while cleaning, the power will shut off as a precaution. If this happens, press the button on the main unit or replug the power cord in again.
- When you use the pump, the extraction will shut off in 30 seconds as a precaution. Press the pump button to stop the pump immediately. If you want to use this mode sequentially, press the pump button again.



1. Never disassemble or recharge the batteries.
2. Never heat up the batteries or throw them into a fire.
3. Do not reverse (+), (-) poles.
4. Dispose of the batteries property.

BATTERY TYPE : AAA Size

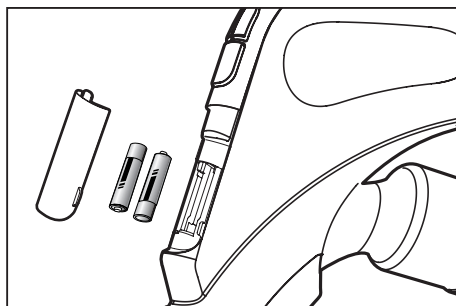


SPRAY EXTRACTION


Fill the empty water dispenser fresh water (lukewarm, not exceeding 30 °C).



Add the SAMSUNG cleaning agent. Dillution can be made easier with the attached measuring cup. Dose : 12ml with 1.5ℓ water

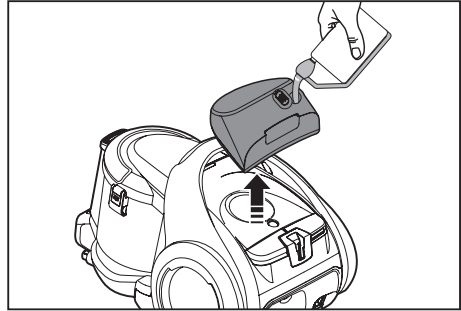


- For fresh water supply, clean the water filter regularly.

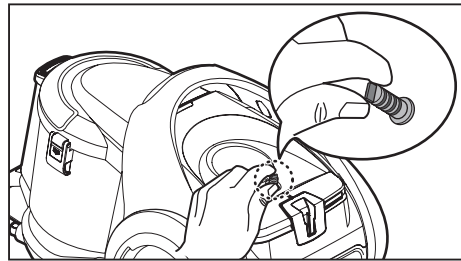

Removing the moisture inside the pipe and hose.




- For better suction of water and dust, clean the floor by pulling the built-in brush toward you.
- After water cleaning is completed, keep the operation for more than 10 seconds to remove the remaining moisture inside the pipe and hose.

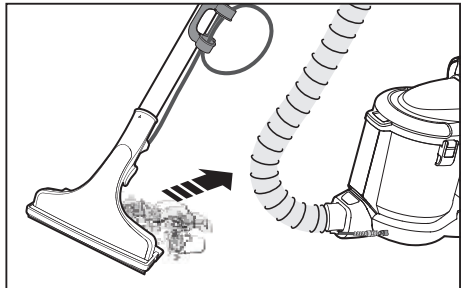


Built-in-Brush

To use the built-in-brush on the carpet floor, pull out the side buttons.

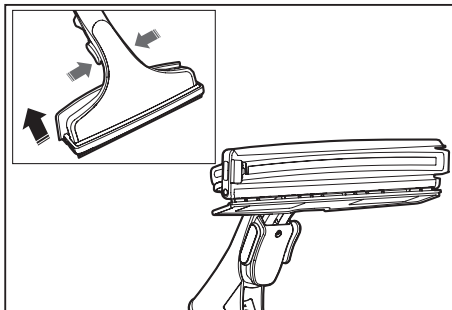


Push the side buttons, to use the built-in-brush on the hard floor.

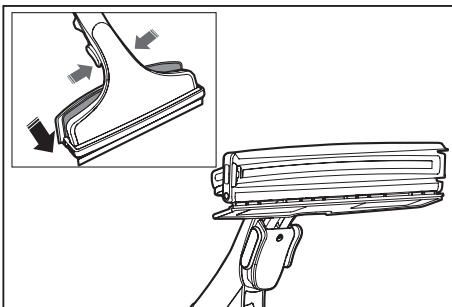


To clean the window, push the towel towards the bottom and wet the towel.



The towel can be fixed by the fixture.

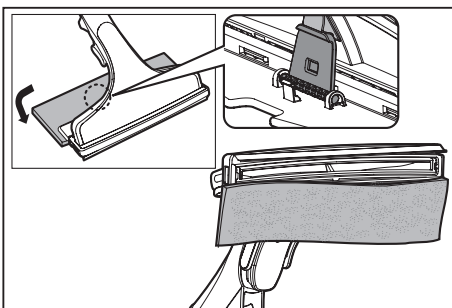

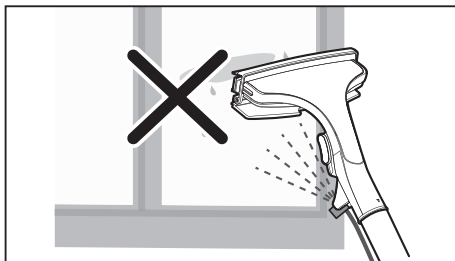

When clean the window, never spray the water directly. It may cause damaging to wallpaper or paintings.



Maintenance

CLEANING THE DUST BIN AND GRILLE

Empty out the dust from the dust bin, if dust reaches 'MAX' . Empty out the water from dust bin, if dust reaches 'MAX' .

- ★ Fill the dust bin with the fresh water to 'MAX'  for water-filter cleaning.





Take the dust bin out by lifting the handle.

- ★ Unless lots of water soaks through the dust filter, it will still function properly as it will evaporate naturally.


Pull each two holder and separate dust bin cover.

Turn the grille and take out it.


- ★ The float ball valve is in the grille. It may make a noise.

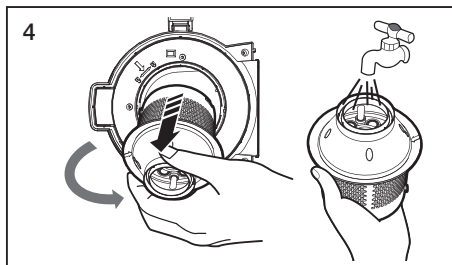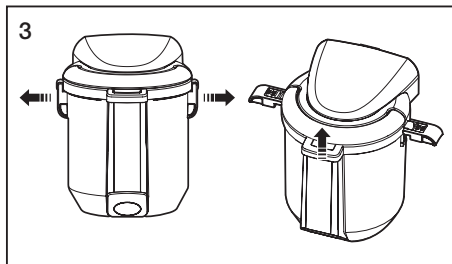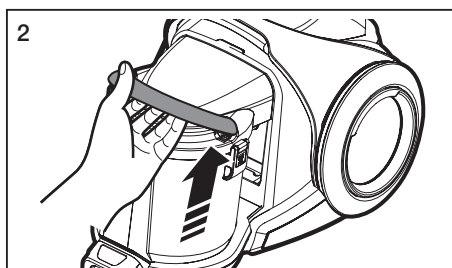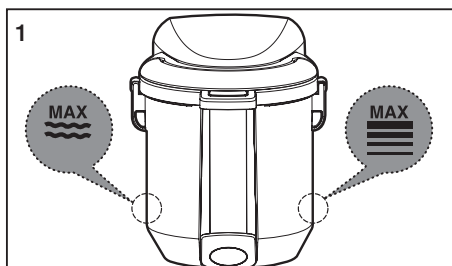


Separate and clean the dust bin duct.

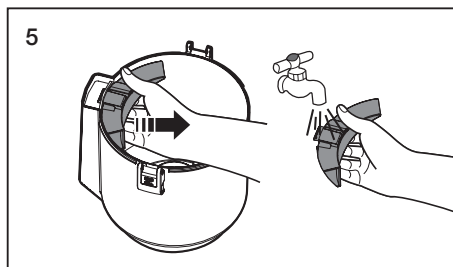


Clean the dust bin and body with water.

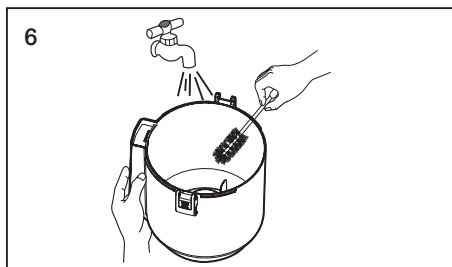

Leave the dust bin and body in the shade until completely dry.

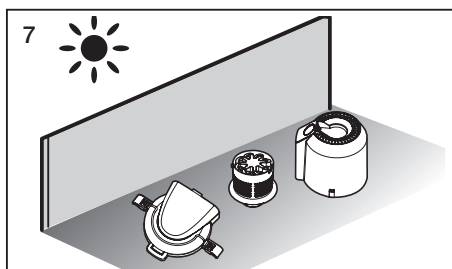


Install the grille and turn to clockwise.

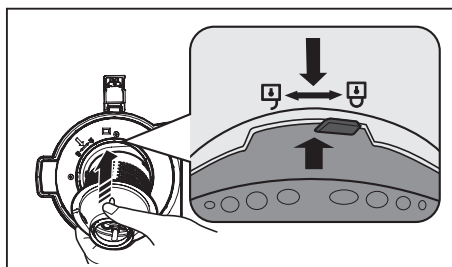


CLEANING THE DUST FILTER

- When suction is noticeably reduced continuously.
- When the sponge is heavily polluted.


Remove the fixed frame and open the dust pack cover.

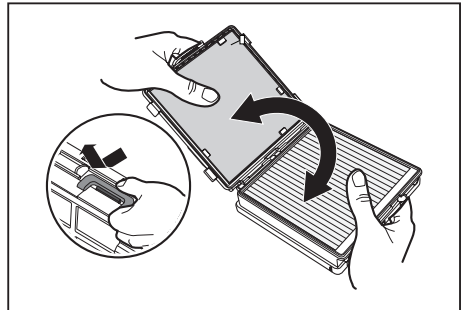

Separate the sponge from the dust pack.

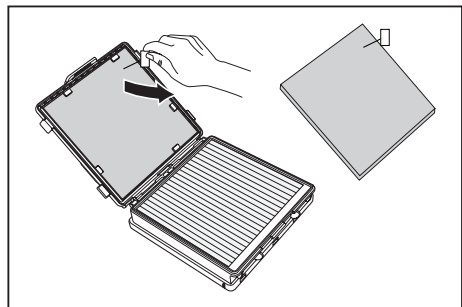


Wash the sponge and the filter inside the dust pack with water.

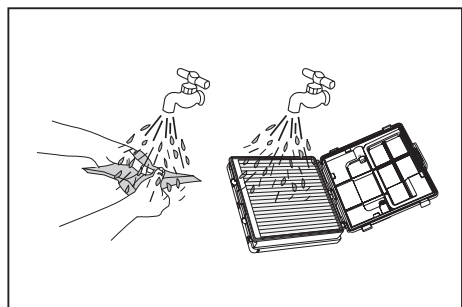


- Please replace the filter 1~2 times a year.
- Replacement filters are available at your local Samsung service center.


Let the sponge and filter dry in the shade for more than 12 hours.

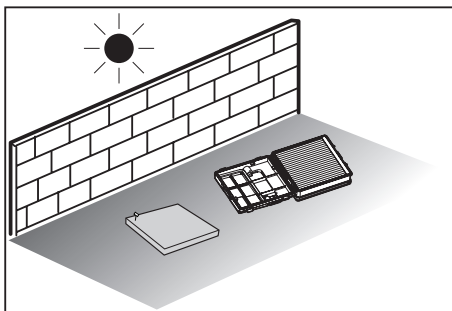

Put the sponge into the dust pack carefully.

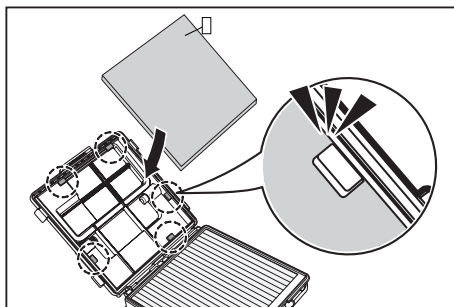


Close the dust pack cover and check the fixed frame locked properly.

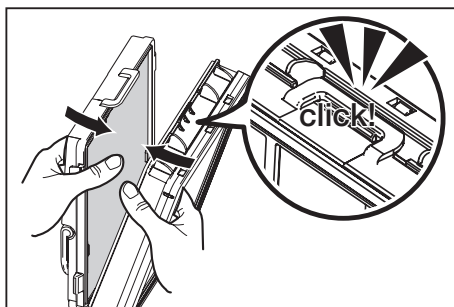


CLEANING THE OUTLET FILTER


Pull out the outlet filter holder.

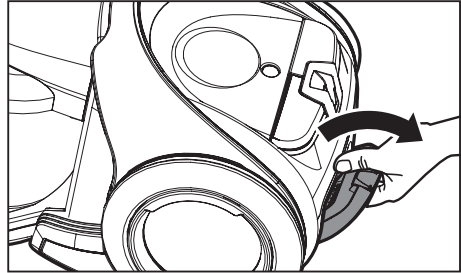

Pull out the outlet filter from set.

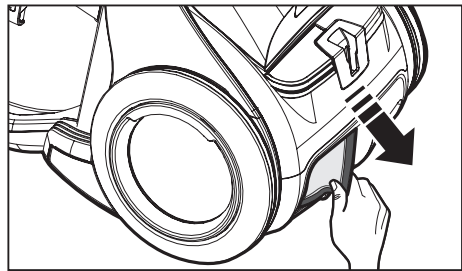


Shake the filter to clean.

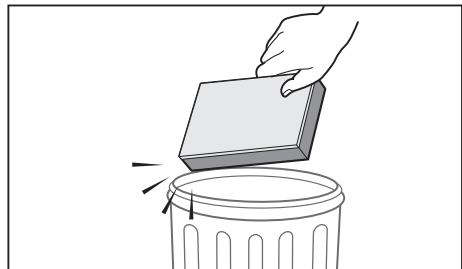

Place the filter into the set and install holder.



Insert the outlet filter so that its black section faces outwards.

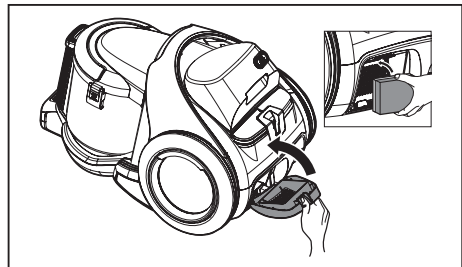


- When suction is noticeably reduced continuously or vacuum cleaner abnormally overheats, please clean the outlet filter.
- If cleaning does not resolve the problem, please replace outlet filter.

MAINTAIN FLOOR TOOLS

2-Step brush

Adjust the inlet lever according to the floor surface.


Put the sponge into the dust pack carefully.

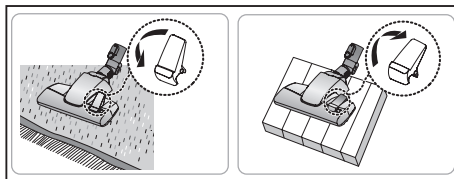

Carpet Cleaning

Floor Cleaning


Remove waste matter completely if the inlet is blocked.

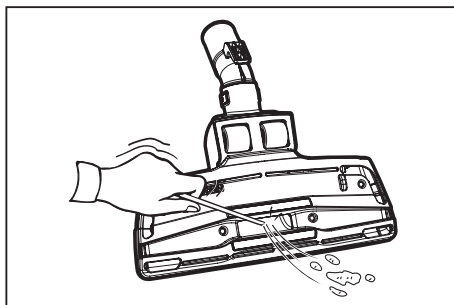

Parquet master brush (Optional)

Vacuum dust in wide area at once.



Remove waste matter completely if the inlet is blocked.

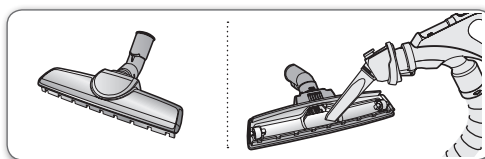



Mini turbo brush (Optional Accessory)

- To check belt

- ★ Check brushroll, when a clog is present or debris is visible.

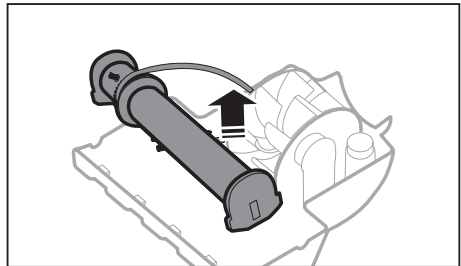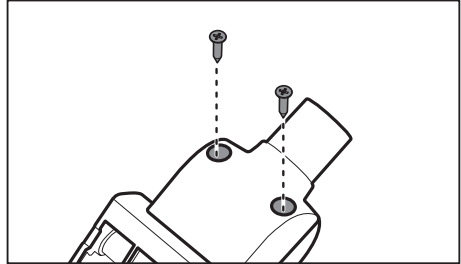

- ★ Inspect belt to ensure that it is in good condition.
If belt is broken or cracked, replace belt according to instructions.

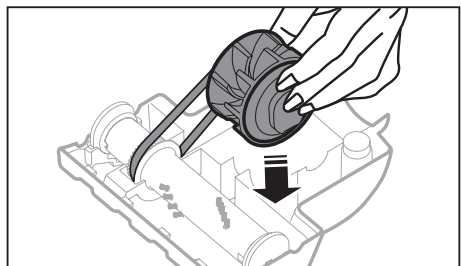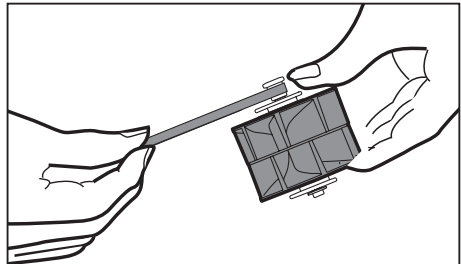

Troubleshooting

PROBLEM	SOLUTION
Motor downs and does not start.	<ul style="list-style-type: none"> • Check cable, plug and socket. • Leave to cool.
Suction force is gradually decreasing.	<ul style="list-style-type: none"> • Check for blockage and remove.
Cord does not rewind fully.	<ul style="list-style-type: none"> • Pull the cord out 2~3m and push down the cord rewind button.
Vacuum cleaner downs, does not pick up dirt	<ul style="list-style-type: none"> • Check hose and replace if required.
Water leakage from the dust bin.	<ul style="list-style-type: none"> • Check rubber packing inserted tightly at the upper part.
Excessive water drops from the inside of the body.	<ul style="list-style-type: none"> • Some droplets on the inside body are to be expected. Please dry the aqua cyclone fully.
Dirty water comes out of the top of the main body	<ul style="list-style-type: none"> • Check the filter is located properly. • If the amount of water becomes excessive, check if water inside dust bin is over the max line and make the water level is under the max line.
Water comes out from the back cover.	<ul style="list-style-type: none"> • Check the water level of the aqua cyclone. • Please operate the vacuum cleaner without the aqua cyclone until water does not come out from the back cover.
Low or decreasing suction.	<ul style="list-style-type: none"> • Please check filters. If required clean it as illustrated in the instruction. If filters are out of conditions, change them to new one.
Body overheating	<ul style="list-style-type: none"> • Please check filters. If required clean it as illustrated in the instruction.
Static electricity discharge	<ul style="list-style-type: none"> • Please decrease power suction. • Please ventilate room to increase humidity.
Unpleasant smell during vacuuming	<ul style="list-style-type: none"> • Please note that there may be a slight smell during vacuuming when the cleaner is new (4-5 days).
Nozzle does not spray water well.	<ul style="list-style-type: none"> • Clean the nozzle hole with a slender tool.
Water supply from the water tank is uneven.	<ul style="list-style-type: none"> • Check and clean the water filter of the water supply hole.

Memo

Memo



Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

Country	Customer Care Center	Web Site
AUSTRALIA	1300 362 603	www.samsung.com
HONG KONG	(852) 3698-4698	www.samsung.com/hk www.samsung.com/hk_en
MALAYSIA	1800-88-9999	www.samsung.com
SINGAPORE	1800-SAMSUNG (7267864)	www.samsung.com
INDIA	1800 3000 8282 1800 266 8282	www.samsung.com/in

This product is RoHS compliant



DJ68-00712E-00